



## Operator's Manual

**optris® CS**



**Infrared thermometer**

**Opbris GmbH**

Ferdinand-Buisson-Str. 14  
D – 13127 Berlin  
Germany

Tel.: +49 30 500 197-0

Fax: +49 30 500 197-10

E-mail: [info@optris.de](mailto:info@optris.de)

Internet: [www.optris.de](http://www.optris.de)



## Table of contents

<b>1</b>	<b>General notes .....</b>	<b>7</b>
1.1	Intended use .....	7
1.2	Warranty .....	8
1.3	Scope of delivery .....	9
1.4	Maintenance .....	9
1.4.1	Cleaning.....	9
<b>2</b>	<b>Technical Data .....</b>	<b>11</b>
2.1	Default settings .....	11
2.2	General specifications .....	14
2.3	Electrical specifications.....	16
2.4	Measurement specifications .....	18
2.5	Optical charts.....	20

2.6	Close focus optics .....	21
2.7	LED-Functions .....	23
2.7.1	Automatic aiming support .....	23
2.7.2	Self-diagnostic .....	24
2.7.3	Temperature code indication .....	25
<b>3</b>	<b>Installation .....</b>	<b>27</b>
3.1	Mechanical Installation .....	27
3.1.1	Mounting accessories .....	28
3.1.2	Air purge collar .....	30
3.1.3	Other accessories .....	32
3.1.4	Tilt assembly .....	34
3.2	Electrical Installation .....	35
3.2.1	Digital communication .....	37

3.2.2	Open collector output.....	38
3.2.3	Direct connection to a RS232 on the computer .....	39
<b>4</b>	<b>Schematic circuit diagrams for maintenance applications.....</b>	<b>41</b>
<b>5</b>	<b>Software CompactConnect.....</b>	<b>45</b>
5.1	Installation.....	45
5.2	Communication settings .....	47
5.2.1	Serial Interface.....	48
5.2.2	Protocol.....	48
<b>6</b>	<b>Digital command set.....</b>	<b>49</b>
<b>7</b>	<b>Basics of Infrared Thermometry .....</b>	<b>51</b>
<b>8</b>	<b>Emissivity .....</b>	<b>53</b>
8.1	Definition .....	53
8.2	Determination of unknown emissivity .....	53
8.3	Characteristic emissivity .....	55

<b>Appendix A – Table of emissivity for metals .....</b>	<b>57</b>
<b>Appendix B - Table of emissivity for non-metals .....</b>	<b>59</b>
<b>Appendix C – Direct connection to a RS232 interface.....</b>	<b>61</b>
<b>Appendix D – Smart averaging .....</b>	<b>63</b>
<b>Appendix E – CE Conformity.....</b>	<b>65</b>

# 1 General notes

## 1.1 Intended use

The sensors of the optris CS series are non-contact infrared temperature sensors. They calculate the surface temperature based on the emitted infrared energy of objects [► **7 Basics of Infrared Thermometry**]



The CS sensors are sensitive optical systems. Use the thread for mechanical installation only. Avoid mechanical violence on the head – this may destroy the system (expiry of warranty).



- Avoid abrupt changes of the ambient temperature.
- In case of problems or questions which may arise when you use the infrared camera contact our service department.



Read the manual carefully before the initial start-up. The producer reserves the right to change the herein described specifications in case of technical advance of the product.



- ▶ All accessories can be ordered according to the referred part numbers in brackets [ ].

## 1.2 Warranty

Each single product passes through a quality process. Nevertheless, if failures occur contact the customer service at once. The warranty period covers 24 months starting on the delivery date. After the warranty is expired the manufacturer guarantees additional 6 months warranty for all repaired or substituted product components. Warranty does not apply to damages, which result from misuse or neglect. The warranty also expires if you open the product. The manufacturer is not liable for consequential damage or in case of a non-intended use of the product.

If a failure occurs during the warranty period the product will be replaced, calibrated or repaired without further charges. The freight costs will be paid by the sender. The manufacturer reserves the right to exchange components of the product instead of repairing it. If the failure results from misuse or neglect the user has to pay for the repair. In that case you may ask for a cost estimate beforehand.

### 1.3 Scope of delivery

- CS incl. connection cable
- Mounting nut and mounting bracket (fixed)
- Operator's manual

### 1.4 Maintenance



Never use cleaning compounds which contain solvents (neither for the lens nor for the housing).

#### 1.4.1 Cleaning

Blow off loose particles using clean compressed air. The lens surface can be cleaned with a soft, humid tissue moistened with water or a water based glass cleaner.



## 2 Technical Data

### 2.1 Default settings



**Smart Averaging** means a dynamic average adaptation at high signal edges. [Activation via software only]. [[► Appendix D](#)]



The default settings can be changed with the optional USB kit (USB adapter cable + software). If the unit is supplied together with the USB kit the output is already preset to digital communication (bidirectional).

At time of delivery the unit has the following pre-settings:

Emissivity	0.950
Transmission	1.000
Average time	0.3 s
Smart averaging	active

Smart averaging hysteresis	2 °C
Ambient temperature source	internal (head)
Status-LED function	Self-diagnostic
Input (IN/ OUT/ green)	inactive
Output (OUT/ yellow)	mV output
Temperature range	0...350 °C
Output voltage	0...3.5 V
Thermocouple output	Inactive
Vcc adjust	inactive
Signal processing	Hold mode: off
Calibration	Gain 1.000/ Offset 0.0
Failsafe	Inactive

For a usage of the CS for online maintenance applications (in electrical cabinets e.g.) the following recommend settings are already included in the factory default setting (but not active):

OUT	At 3-state output the following settings are default:  Pre-alarm difference: 2 °C  No alarm level: 8 V  Pre-alarm level: 5 V  Alarm level: 0 V  Service voltage: 10 V
IN/ OUT	At Alarm output (open collector) the following settings are default:  Mode: normally closed  Temp code output: activated (for values above alarm level)  Range settings: 0 °C = 0 % / 100 °C = 100 %
Vcc adjust	If activated the following settings are default:  Output voltage range: 0-10 V

	Difference mode:	activated
Alarm level	Alarm value (IN/ OUT pin)	Vcc
1	40 °C	11 V
2	45 °C	12 V
3	50 °C	13 V
4	55 °C	14 V
5	60 °C	15 V
6	65 °C	16 V
7	70 °C	17 V
8	75 °C	18 V
9	80 °C	19 V
10	85 °C	20 V

## 2.2 General specifications

Environmental rating	IP63
Ambient temperature	-20..80 °C
Storage temperature	-40..85 °C
Relative humidity	10...95 %, non-condensing
Material	Stainless steel

Dimensions	85 mm, M12x1
Weight	58 g
Cable length	1 m (Standard), 3 m, 8 m, 15 m
Cable diameter	4.3 mm
Vibration	IEC 60068-2-6 (sinus shape), IEC 60068-2-64 (broad band noise)
Shock	IEC 60068-2-27 (25 g and 50 g)

## 2.3 Electrical specifications

Used Pin		Function	
OUT	IN/ OUT		
X		Analog	0-5 V <sup>1)</sup> or 0-10 V <sup>2)</sup> / scalable
X		Alarm	output voltage adjustable; N/O or N/C
X		Alarm	3-state alarm output (three voltage level for no alarm, pre-alarm, alarm)
	X	Analog	programmable open collector output [0-30 V DC/ 50 mA] <sup>4)</sup>
	X	Temp. Code	Temp. Code Output (open collector [0-30 V DC/ 50 mA] <sup>4)</sup>
	X	Input	programmable functions: <ul style="list-style-type: none"> <li>• external emissivity adjustment</li> <li>• ambient temperature compensation</li> <li>• triggered signal output and peak hold function <sup>5)</sup></li> </ul>
X	X	Serial digital <sup>3)</sup>	uni- (burst mode) or bidirectional
OUT t/c K		Analog	Thermocouple output type K; alternatively selectable to the mV output (software necessary)

Status LED		green LED with programmable functions: <ul style="list-style-type: none"> <li>• alarm indication (threshold independent from alarm outputs)</li> <li>• automatic aiming support</li> <li>• self-diagnostics</li> <li>• temperature code indication</li> </ul>
Vcc adjust mode		10 adjustable emissivity and alarm values by variation of supply voltage/ Service mode for analog output
Output impedances		min. 10 kΩ load impedance
Current draw		10 mA
Power supply		5...30 VDC


<sup>1)</sup> 0...4.6 V at supply voltage 5 VDC; also valid for alarm output

<sup>2)</sup> only at supply voltage  $\geq$  11 V

<sup>3)</sup> inverted RS232, TTL, 9.6 kBaud

<sup>4)</sup> loadable up to 500 mA if the mV output is not used

<sup>5)</sup> High level: > 0.8 V/ Low level: < 0.8 V

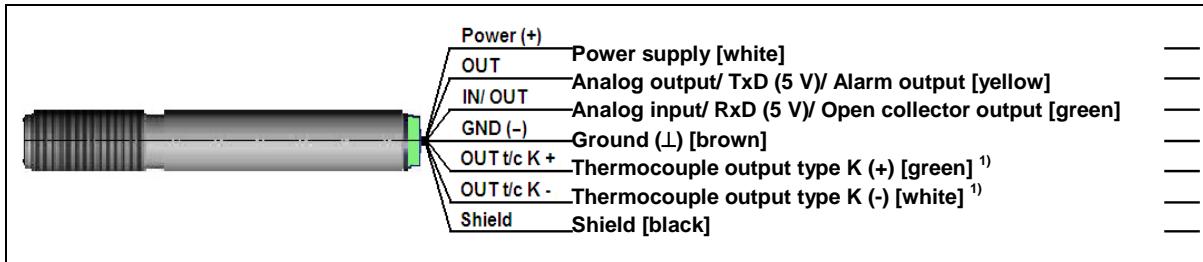

<sup>1)</sup> The t/c wires are indicated with an additional cable marker to avoid wrong connections due to the identical cable colours of other wires (white, green).

## 2.4 Measurement specifications

Temperature range	-40...1030 °C (scalable via Software)
Spectral range	8...14 µm
Optical resolution	15:1
CF-lens (optional)	0.8 mm@ 10 mm
Accuracy <sup>1) 2)</sup>	±1.5 °C or ±1.5 % of reading (whichever is greater)
Repeatability <sup>1)</sup>	±0.75 °C or ±0.75 % of reading (whichever is greater)

Temperature coefficient <sup>3)</sup>	$\pm 0.05 \text{ K/K}$ or $\pm 0.05 \text{ %/K}$ (whichever is greater)
Temperature resolution (NETD) <sup>4)</sup>	0.1 K
Response time	25 ms (95 % Signal/ adjustable to 999 s via Software)
Warm-up time	10 min
Emissivity/ Gain	0,100...1,100 (adjustable via 0-10 VDC input or software)
Transmissivity	0,100...1,000 (adjustable via software)
Interface (optional)	USB programming interface
Signal processing	Average, Peak hold, Valley hold, Advanced peak hold with threshold and hysteresis, Triggered signal output, Triggered peak hold function (adjustable via software)
Software	optional (CompactConnect)

<sup>1)</sup> at ambient temperature  $23 \pm 5 \text{ }^{\circ}\text{C}$  and object temperatures  $> 0 \text{ }^{\circ}\text{C}$

<sup>2)</sup> Accuracy for thermocouple output:  $\pm 2.5 \text{ }^{\circ}\text{C}$  or  $\pm 1\%$

<sup>3)</sup> for ambient temperatures  $< 18 \text{ }^{\circ}\text{C}$  and  $> 28 \text{ }^{\circ}\text{C}$

<sup>4)</sup> at time constant  $\geq 100 \text{ ms}$  with smart averaging and an object temperature of  $25 \text{ }^{\circ}\text{C}$


## 2.5 Optical charts




- The size of the measuring object and the optical resolution of the infrared thermometer determine the maximum distance between sensing head and measuring object.
- In order to prevent measuring errors the object should fill out the field of view of the optics completely. Consequently, the spot should at all times have at least the same size like the object or should be smaller than that.

The following optical charts show the diameter of the measuring spot in dependence on the distance between measuring object and sensing head. The spot size refers to **90 % of the radiation energy**.

The distance is always measured from the front edge of the sensor housing/ CF-lens holder/ air purge.

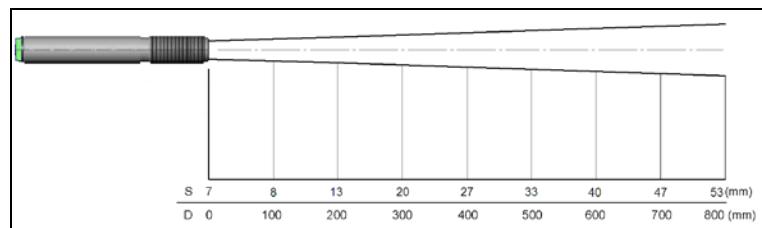

**Figure 1:** Optical chart CS (15:1)

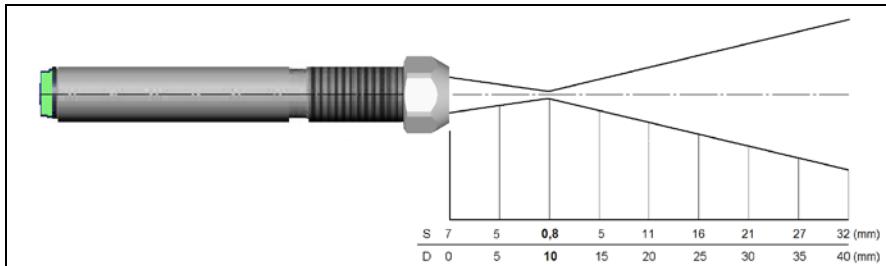


**Figure 2:** Optical chart CS (15:1) with CF-lens (0.8 mm@ 10 mm)

## 2.6 Close focus optics




- If the CF-lens is used, the transmission has to be set to **0.78**. To change this value the optional USB-Kit (including software) is necessary.
- The assigned transmission (average value) is a characteristic value which may have a certain scattering. If required the transmission has to be determined.

The optional CF-lens allows the measurement of small objects. The CF optics can also be combined with a laminar air purge

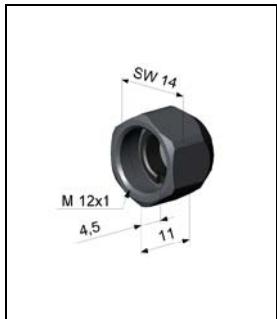

**Figure 3:** CF-lens [Order-No.: ACCTCF]

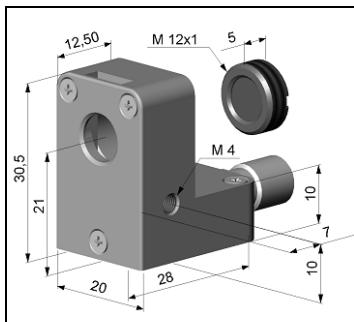

**Figure 4:** Laminar air purge with integrated CF-lens [Order-No.: ACCTAPLCF]

## 2.7 LED-Functions

The green LED can be programmed for the following functions. For the programming the **USB adapter cable incl. software (option)** is necessary. The factory default setting for the LED is self-diagnostic.

LED Alarm	LED lights up if the object temperature exceeds or deceeds an alarm threshold
Automatic aiming support	Sighting feature for an accurate aiming of the CS to hot or cold objects
Self-diagnostic	LED is indicating different states of the sensor
Temperature Code indication	Indication of the object temperature via the LED
Off	LED deactivated

### 2.7.1 Automatic aiming support

The automatic aiming support helps to adjust the unit to an object which has a temperature different to the background. If this function is activated via software the sensor is looking for the highest object temperature; means the threshold value for activating the LED will be automatically tuned.

This works also if the sensor is aimed at a new object (with probably colder temperature). After expiration of a certain reset time (default setting: 10s) the sensor will adjust the threshold level for activation of the LED new.

## 2.7.2 Self-diagnostic



At a supply voltage ( $V_{cc}$ )  $\geq 12$  V it takes about 5 minutes until the sensor works in a stable mode. Therefore, after switching on the unit, the LED will show a not stable state for up to 5 minutes.

With this function the current status of the sensor will be indicated by different flash modes of the LED.

If activated, the LED will show one out of five possible states of the sensor:

<u>Status</u>	<u>LED mode</u>
Normal	intermittent off
Sensor overheated	fast flash
Out of measuring range	double flash
Not stable	intermittent on
Alarm fault	always on

**Figure 5:** Sensor status

Sensor overheated	The internal temperature probes have detected an invalid high internal temperature of the CS.
Out of meas. range	The object temperature is out of measuring range.
Not stable	The internal temperature probes have detected an unequal internal temperature of the CS.
Alarm fault	Current through the switching transistor of the open-collector output is too high.

### 2.7.3 Temperature code indication

With this function the current measured object temperature will be indicated as percentage value by long and short flashing of the LED. At a range setting of 0-100 °C → 0-100% the LED flashing indicates the temperature in °C.

Long flashing → first digit:	<b>xx</b>
Short flashing → second digit:	<b>xx</b>
10-times long flashing → first digit=0:	<b>0x</b>
10-times short flashing → second digit=0:	<b>x0</b>

### Examples

**87 °C**        8-times long flashing indicates        **87**

and afterwards 7-times short flashing indicates        **87**

**31 °C**        3-times long flashing indicates        **31**

and afterwards 1-time short flashing indicates        **31**

**8 °C**        10-times long flashing indicates        **08**

and afterwards 8-times short flashing indicates        **08**


**20 °C**        2-times long flashing indicates        **20**

and afterwards 10-times short flashing indicates        **20**

## 3 Installation

### 3.1 Mechanical Installation

The CS is equipped with a metric M12x1 thread and can be installed either directly via the sensor thread or with the help of the both hex nuts (standard) to the mounting bracket available.

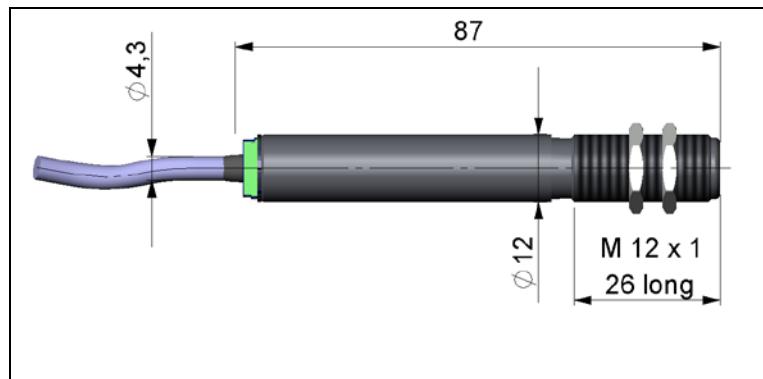


**Figure 6:** Dimensions CS

For an exact aiming of the sensor to an object the LED function ► **Automatic aiming support** can be used.


### 3.1.1 Mounting accessories




The **Mounting fork** can be combined with the **Mounting bracket [Order No.: ACCTFB]** using the M12x1 thread.

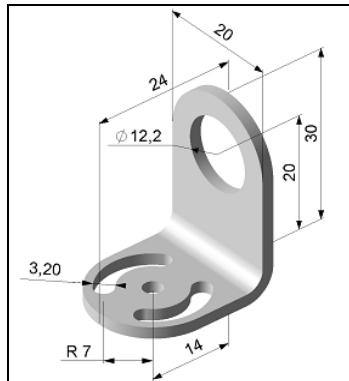

**Figure 7:** Mounting bracket, adjustable in one axis [Order No.: ACCTFB]

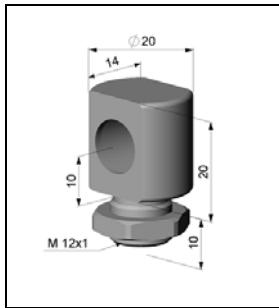

**Figure 8:** Mounting bolt with M12x1 thread, adjustable in one axis [Order No.: ACCTMB]

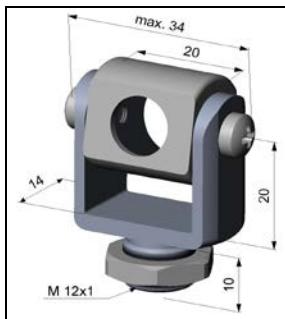

**Figure 9:** Mounting fork with M12x1 thread, adjustable in 2 axes [Order No.: ACCTMG]




**Figure 10:** Mounting bracket, adjustable in two axes [Order No.: ACCTAB]

### 3.1.2 Air purge collar




- Use oil-free, technically clean air only.
- The needed amount of air (approx. 2...10 l / min.) depends on the application and the installation conditions on-site.

The lens must be kept clean at all times from dust, smoke, fumes and other contaminants in order to avoid reading errors. These effects can be reduced by using an **air purge collar**.

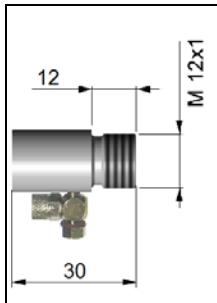

**Figure 11:** Standard air purge collar; fits to the mounting bracket; hose connection: 3x5 mm [Order No.: ACCSAP]

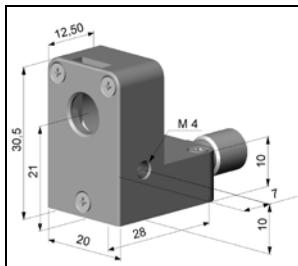

**Figure 12:** Laminar air purge collar – the side air outlet prevents a cooling down of the object in short distances; hose connection: 3x5 mm [Order No.: ACCTAPL]




**Figure 13:** A combination of the laminar air purge collar with the bottom section of the mounting fork allows an adjustment in two axes. [Order No.: ACCTAPL+ACCTMG]

### 3.1.3 Other accessories



If the protective window is used, the transmission has to be set to **0.83**. To change this value the optional USB-Kit (including CompactConnect software) is necessary.

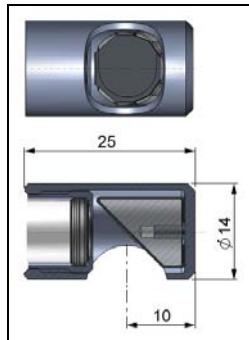

**Figure 14:** Right angle mirror enables measurement with 90° angle [Order No.: ACCTRAM]



**Figure 15:** Protective window same mechanical size as CF lens [Order No.: ACCTPW]



**Figure 16:** USB adapter cable incl. terminal block and software CD [Order No.: ACCSUSBK]

### 3.1.4 Tilt assembly

With this mounting accessory a fine adjustment of the CS with an off-axis angle +/- 6.5° is possible.



**Figure 17:** Tilt assembly [Order No.: ACCTTAS]

### 3.2 Electrical Installation



Use a separate, stabilized power supply unit with an output voltage in the range of **5–30 VDC** which can supply **100 mA**. The residual ripple should be max **200 mV**.




- Use shielded cables only. The sensor shield has to be grounded.
- The shield [black] on the CS is not connected to GND [brown]. In any case it is necessary to connect the shield to ground or GND (whichever works best)!

#### Analog device (mV-output at OUT pin)



The output impedance must be  $\geq 10 \Omega$ .

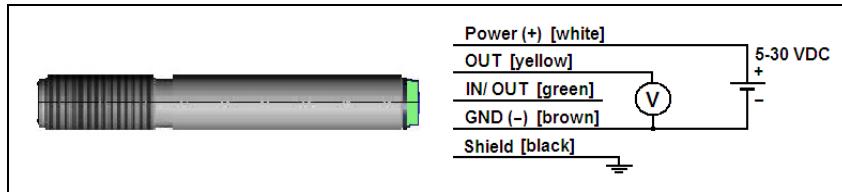


**Figure 18:** Analog device (mV output at OUT pin)

#### Analog device (Thermocouple typ K at OUT t/c K pins)



The output impedance must be  $\geq 20 \Omega$ .

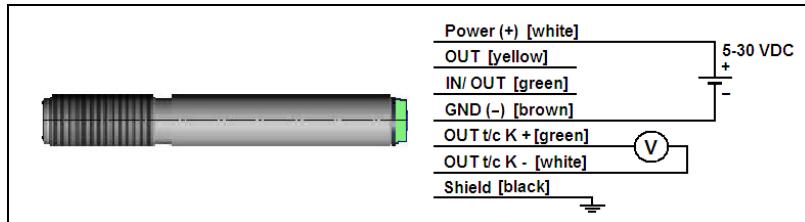

**Figure 19:** Analog device (Thermocouple typ K at OUT t/c K pins)


You can choose between an mV output (0-5 or 0-10 V; scalable via software) and a thermocouple output type K. Therefor the optional software is needed. The factory default setting is mV output. ► **Factory default settings**

The thermocouple output supplies a voltage according to the t/c characteristic curve type K. If you want to extend this output you have to use a suitable thermocouple extension cable (NiCr-Ni).

### 3.2.1 Digital communication

For a digital communication the optional USB programming kit is required.


1. Connect each wire of the USB adapter cable with the same colored wire of the sensor cable by using the terminal block. Press with a screw driver as shown in the picture to lose a contact.

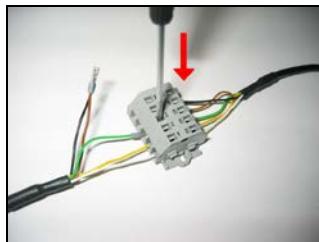

**Figure 20:** Connection USB cable

The sensor is offering two ways of digital communication:

- bidirectional communication (sending and receiving data)
- unidirectional communication (burst mode – the sensor is sending data only)

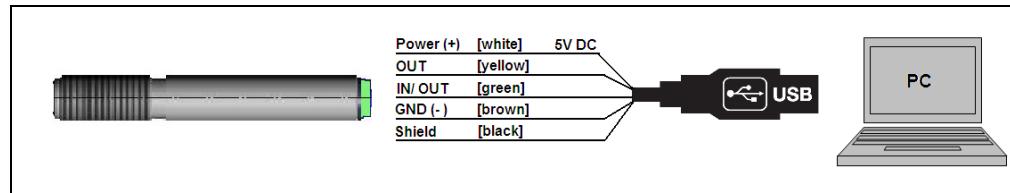


**Figure 21:** Digital communication

### 3.2.2 Open collector output



In case of long lines there is a drop voltage at the ground wire and the mV-output is distorted. Because of that the brown wire can be used as ground supply and the t/c-wire (type K) as measuring ground.

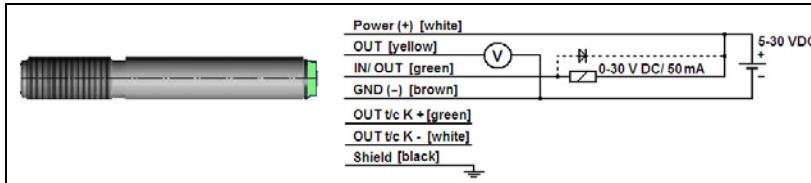

**Figure 22:** Open collector output as additional alarm output


The open collector output is an additional alarm output on the CS and can control an external relay e.g. In addition the analogue output can be used simultaneously.

### 3.2.3 Direct connection to a RS232 on the computer


For a bidirectional RS232 connection of the sensor the following interface circuit can be used: MAX3381E (manufacturer: Maxim) ► **Appendix C:**




## 4 Schematic circuit diagrams for maintenance applications

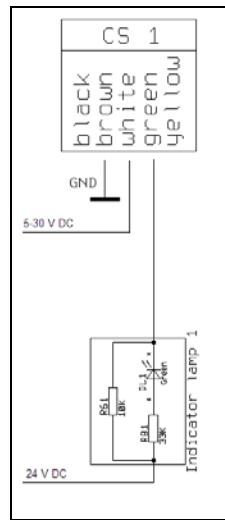

**Figure 23:** Open collector output for direct 24V DC signal lamp control

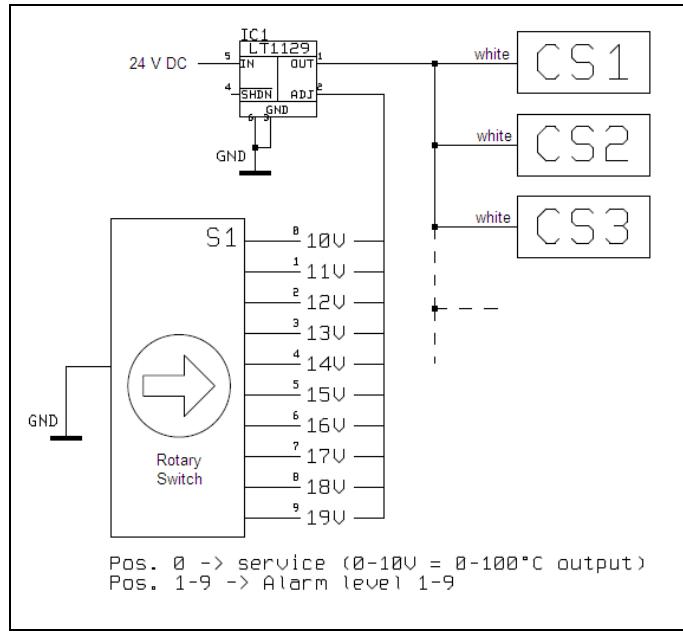

**Figure 24:** Common power supply voltage change to adjust simultaneously alarm levels and emissivity values [Vcc adjust mode]

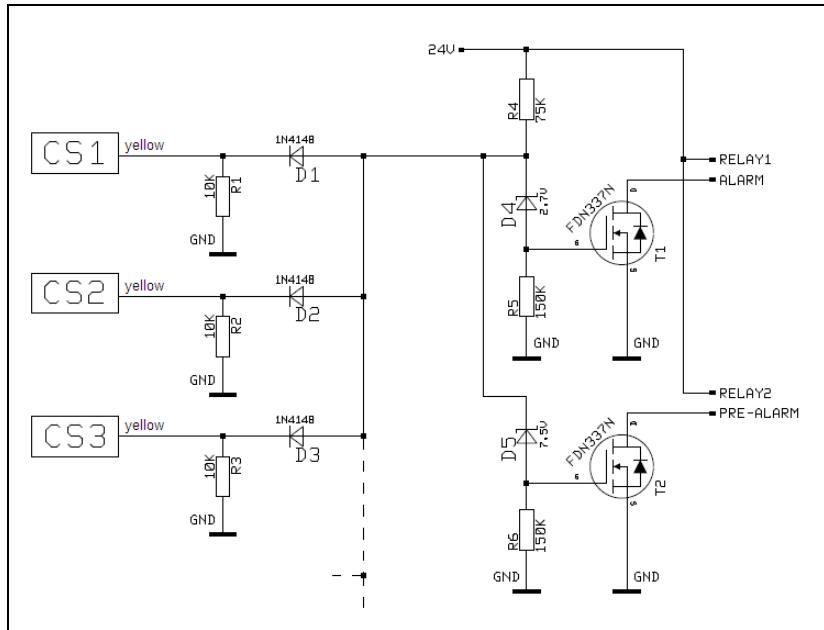

**Figure 25:** Simple common alarm and pre-alarm generation



## 5 Software CompactConnect



### Minimum system requirements:

- Windows Vista, Windows 7, Windows 8
- USB interface
- Hard disc with at least 30 MByte of free space
- At least 128 MByte RAM
- CD-ROM drive




A detailed description is provided in the software manual on the software CD.

### 5.1 Installation

1. Insert the installation CD into the according drive on your computer. If the **autorun option** is activated the installation wizard will start automatically.
2. Otherwise start **setup.exe** from the CD-ROM. Follow the instructions of the wizard until the installation is finished.

The installation wizard will place a launch icon on the desktop and in the start menu:  
**Start\Programs\CompactConnect**

To uninstall the software from your system use the **uninstall** icon in the start menu.

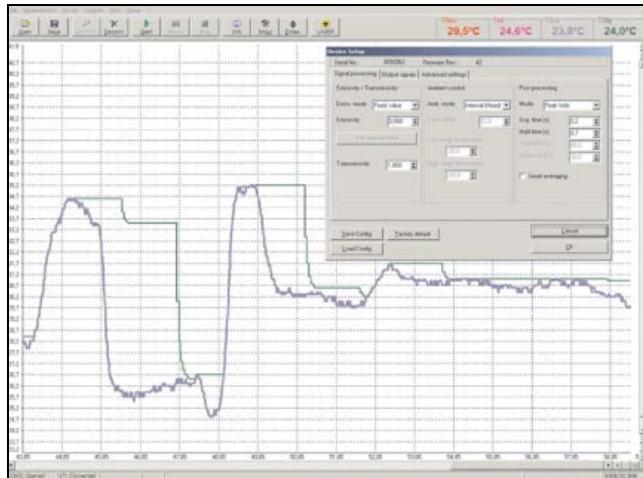

**Figure 26:** Software CompactConnect

**Main functions:**

- Graphic display for temperature trends and automatic data logging for analysis and documentation
- Complete sensor setup and remote controlling
- Adjustment of signal processing functions
- Programming of outputs and functional inputs

## 5.2 Communication settings



For further information see protocol and command description on the software CD CompactConnect in the directory: \Commands.

### 5.2.1 Serial Interface

Baud rate:	9,6...115,2 kBaud (adjustable on the unit or via software)
Data bits:	8
Parity:	none
Stop bits:	1
Flow control	off

### 5.2.2 Protocol

All sensors of the CTlaser series are using a binary protocol. Alternatively they can be switched to an ASCII protocol. To get a fast communication the protocol has no additional overhead with CR, LR or ACK bytes.

## 6 Digital command set

Commands CS/ CSmicro/ CX							
Decimal	HEX	Binary/ ASCII	Command	Data	Answer	Result	Unit
1	0x01	binary	READ Temp - Target	no	byte1 byte2	= (byte1 x 256 + byte2 - 1000) / 10	°C
2	0x02	binary	READ Temp - Head	no	byte1 byte2	= (byte1 x 256 + byte2 - 1000) / 10	°C
3	0x03	binary	READ current Temp - Target	no	byte1 byte2	= (byte1 x 256 + byte2 - 1000) / 10	°C
4	0x04	binary	READ Emissivity	no	byte1 byte2	= (byte1 x 256 + byte2) / 1000	
5	0x05	binary	READ Transmission	no	byte1 byte2	= (byte1 x 256 + byte2) / 1000	
9	0x09	binary	READ Processor Temperature	no	byte1	= (byte1 x 256 + byte2 - 1000) / 10	
14	0x0E	binary	READ Serial number	no	byte1 byte2 byte3	= byte1 x 65536 + byte2 x 256 + byte3	
15	0x0F	binary	READ FW Rev.	no	byte1 byte2	= byte1 x 256 + byte2	
129	0x81	binary	SET DAC mV/ mA	byte1	byte1	byte1 = mV (mA) x 10 (e.g. 4mA = 4 x 10=40)	°C
130	0x82	binary	RESET of DAC mV/ mA output				
132	0x84	binary	SET Emissivity	byte1 byte2	byte1 byte2	= (byte1 x 256 + byte2) / 1000	

Temperature calculation at CSmicro hs:  $(\text{byte1} \times 256 + \text{byte2} - 10000) / 10$

**EXAMPLES (all bytes in HEX)**

**Readout of object temperature**

Send: 01 Command for readout of object temperature  
 Receive: 04 D3 Object temperature in tenth degree + 1000      04 D3 = dec. 1235  
 $1235 - 1000 = 235$   
 $235 / 10 = 23,5$  °C

**Readout of object temperature (at CSmicro 2Whs)**

Send: 01 Command for readout of object temperature  
 Receive: 30 3E Object temperature in hundredth degree + 10000      30 3E = dec. 12350  
 $12350 - 10000 = 2350$   
 $2350 / 100 = 23,50$  °C

**Set of emissivity**

Send: 84 03 B6      03B6 = dec. 950  
 Receive: 03 B6      950 / 1000 = 0,950

### Burstmode (unidirectional)

After switch on a continuous serial signal will be created. The burst string can be configured with the software.

Burst string	Example	Complete burst string	Conversion to decimal value
2 synchronisation bytes: AAAA	-----	-----	
2 bytes for each output value (HI LO)	03B8	AAAA 03B8	process temp [°C] = (Hex $\Rightarrow$ Dec(03B8)-1000)/10 = -4,8



## 7 Basics of Infrared Thermometry

Depending on the temperature each object emits a certain amount of infrared radiation. A change in the temperature of the object is accompanied by a change in the intensity of the radiation. For the measurement of "thermal radiation" infrared thermometry uses a wave-length ranging between 1 µm and 20 µm.

The intensity of the emitted radiation depends on the material. This material contingent constant is described with the help of the emissivity which is a known value for most materials (see enclosed table emissivity).

Infrared thermometers are optoelectronic sensors. They calculate the surface temperature on the basis of the emitted infrared radiation from an object. The most important feature of infrared thermometers is that they enable the user to measure objects contactless. Consequently, these products help to measure the temperature of inaccessible or moving objects without difficulties. Infrared thermometers basically consist of the following components:

- lens
- spectral filter
- detector
- electronics (amplifier/ linearization/ signal processing)

The specifications of the lens decisively determine the optical path of the infrared thermometer, which is characterized by the ratio Distance to Spot size.

The spectral filter selects the wavelength range, which is relevant for the temperature measurement. The detector in cooperation with the processing electronics transforms the emitted infrared radiation into electrical signals.

## 8 Emissivity

### 8.1 Definition

The intensity of infrared radiation, which is emitted by each body, depends on the temperature as well as on the radiation features of the surface material of the measuring object. The emissivity ( $\epsilon$  – Epsilon) is used as a material constant factor to describe the ability of the body to emit infrared energy. It can range between 0 and 100 %. A “blackbody” is the ideal radiation source with an emissivity of 1.0 whereas a mirror shows an emissivity of 0.1.

If the emissivity chosen is too high, the infrared thermometer may display a temperature value which is much lower than the real temperature – assuming the measuring object is warmer than its surroundings. A low emissivity (reflective surfaces) carries the risk of inaccurate measuring results by interfering infrared radiation emitted by background objects (flames, heating systems, chamottes). To minimize measuring errors in such cases, the handling should be performed very carefully and the unit should be protected against reflecting radiation sources.

### 8.2 Determination of unknown emissivity

- ▶ First determine the actual temperature of the measuring object with a thermocouple or contact sensor.  
Second, measure the temperature with the infrared thermometer and modify the emissivity until the displayed result corresponds to the actual temperature.

- If you monitor temperatures of up to 380°C you may place a special plastic sticker (emissivity dots – **Order No.: ACLSED**) onto the measuring object, which covers it completely.
  1. Set the emissivity to 0.95 and take the temperature of the sticker.
  2. Afterwards, determine the temperature of the adjacent area on the measuring object and adjust the emissivity according to the value of the temperature of the sticker.
  3. Cover a part of the surface of the measuring object with a black, flat paint with an emissivity of 0.98. Adjust the emissivity of your infrared thermometer to 0.98 and take the temperature of the colored surface.
  4. Afterwards, determine the temperature of a directly adjacent area and modify the emissivity until the measured value corresponds to the temperature of the colored surface.

**CAUTION:** On all three methods the object temperature must be different from ambient temperature.

### 8.3 Characteristic emissivity

In case none of the methods mentioned above help to determine the emissivity you may use the emissivity table ► **Appendix A** and **Appendix B**. These are average values, only. The actual emissivity of a material depends on the following factors:

- temperature
- measuring angle
- geometry of the surface
- thickness of the material
- constitution of the surface (polished, oxidized, rough, sandblast)
- spectral range of the measurement
- transmissivity (e.g. with thin films)



## Appendix A – Table of emissivity for metals

Material		typical Emissivity
Aluminium	non oxidized	0,02-0,1
	polished	0,02-0,1
	roughened	0,1-0,3
	oxidized	0,2-0,4
Brass	polished	0,01-0,05
	roughened	0,3
	oxidized	0,5
Copper	polished	0,03
	roughened	0,05-0,1
	oxidized	0,4-0,8
Chrome		0,02-0,2
Gold		0,01-0,1
Haynes	alloy	0,3-0,8
Inconel	electro polished	0,15
	sandblast	0,3-0,6
	oxidized	0,7-0,95
Iron	non oxidized	0,05-0,2
	rusted	0,5-0,7
	oxidized	0,5-0,9
	forged, blunt	0,9
Iron, casted	non oxidized	0,2
	oxidized	0,6-0,95
Lead	polished	0,05-0,1

Material		typical Emissivity
Lead	roughened	0,4
	oxidized	0,2-0,6
Magnesium		0,02-0,1
Mercury		0,05-0,15
Molybdenum	non oxidized	0,1
	oxidized	0,2-0,6
Monel (Ni-Cu)		0,1-0,14
Nickel	electrolytic	0,05-0,15
	oxidized	0,2-0,5
Platinum	black	0,9
Silver		0,02
Steel	polished plate	0,1
	rustless	0,1-0,8
	heavy plate	0,4-0,6
	cold-rolled	0,7-0,9
	oxidized	0,7-0,9
Tin	non oxidized	0,05
Titanium	polished	0,05-0,2
	oxidized	0,5-0,6
Wolfram	polished	0,03-0,1
Zinc	polished	0,02
	oxidized	0,1




## Appendix B - Table of emissivity for non-metals

Material	typical Emissivity			
	1,0 µm	2,2 µm	5,1 µm	8-14 µm
Spectral response				
Asbestos	0,9	0,8	0,9	0,95
Asphalt			0,95	0,95
Basalt			0,7	0,7
Carbon non oxidized graphite		0,8-0,9 0,8-0,9	0,8-0,9 0,7-0,9	0,8-0,9 0,7-0,8
Carborundum		0,95	0,9	0,9
Ceramic	0,4	0,8-0,95	0,8-0,95	0,95
Concrete	0,65	0,9	0,9	0,95
Glass plate melt		0,2 0,4-0,9	0,98 0,9	0,85
Grit			0,95	0,95
Gypsum			0,4-0,97	0,8-0,95
Ice				0,98
Limestone			0,4-0,98	0,98
Paint non alkaline				0,9-0,95
Paper any color			0,95	0,95
Plastic >50 µm non transparent			0,95	0,95
Rubber			0,9	0,95
Sand			0,9	0,9
Snow				0,9
Soil				0,9-0,98
Textiles			0,95	0,95
Water				0,93
Wood natural			0,9-0,95	0,9-0,95



## Appendix A – Direct connection to a RS232 interface

For a bidirectional RS232 connection of the sensor we recommend the interface circuit from Maxim, e.g. **MAX3381E**.

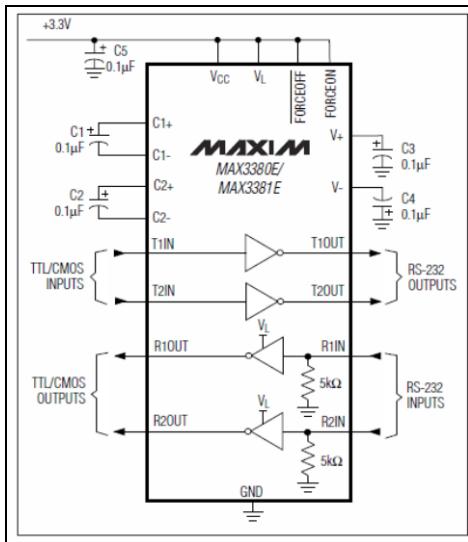

Model	CSv1/ CSMv1	CSv2	CSMv2	CSM2W/ CX
UART voltage (RxD)	5 V	3,3 V	3,3 V	3,3 V
UART voltage (TxD)	5 V	2,5 V	2,5 V	2,5 V

Previous sensor versions:

CSv1            CS/ version 1 (→ 12/2010)

CSMv1            CSmicro/ version 1 (→ 09/2011)

CS connections:      TxD (yellow) an T1IN

                      RxD (green) an R1OUT

                      GND (brown) an GND


PC connections:      connect T1OUT with RxD (PC)

                      connect R1IN with TxD (PC)

## Appendix B – Smart averaging

The average function is generally used to smoothen the output signal. With the adjustable parameter time this function can be optimally adjusted to the respective application. One disadvantage of the average function is that fast temperature peaks which are caused by dynamic events are subjected to the same averaging time. Therefore those peaks can only be seen with a delay on the signal output.

The function **Smart Averaging** eliminates this disadvantage by passing those fast events without averaging directly through to the signal output.

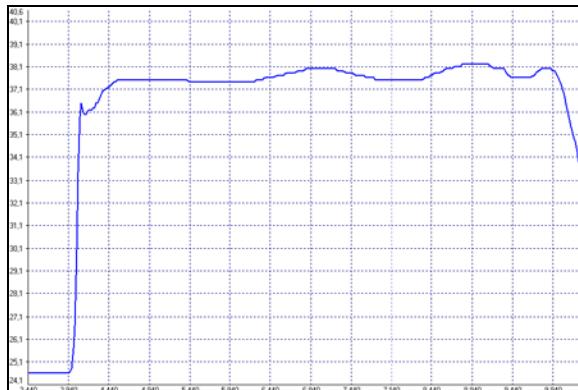

Signal graph with Smart Averaging function



Signal graph without Smart Averaging function



## Appendix E – CE Conformity

<p><b>EG-Konformitätserklärung EU Declaration of Conformity</b></p> <p>Wir / We</p> <p><b>Optris GmbH</b> Ferdinand Buisson Str. 14 D-13127 Berlin</p> <p>erklären in alleiniger Verantwortung, dass declare on our own responsibility that</p> <p>die Produktserie optris CS the product group optris CS</p> <p>den Anforderungen der EMV-Richtlinie 2004/108/EG und der Niederspannungsrichtlinie 2006/95/EG entspricht. meets the provisions of the EMC Directive 2004/108/EG and the Low Voltage Directive 2006/95/EG.</p> <p>Angewandte harmonisierte Normen: Applied harmonized standards:</p> <p>EMV Anforderungen / EMC General Requirements: <b>EN 61326-1-2:2006</b> (Grundlegende Prüfanforderungen / Basic requirements) <b>EN 61326-2-3:2006</b></p> <p>Gerätesicherheit von Messgeräten / Safety of measurement devices: <b>EN 61010-1:2010</b> <b>EN 60825-1:2007</b> (Lasersicherheit / Laser safety)</p> <p>Dieses Produkt erfüllt die Vorschriften der Richtlinie 2011/65/EU des Europäischen Parlaments und des Rates vom 8. Juni 2011 zur Beschränkung der Verwendung bestimmter gefährlicher Stoffe in Elektro- und Elektronikgeräten. This product is in conformity with Directive 2011/65/EU of the European Parliament and of the Council of 8 June 2011 on the restriction of the use of certain hazardous substances in electrical and electronic equipment.</p> <p>Berlin, 18.09.2014</p> <p>Ort, Datum / place, date</p> <p> Dr. Ulrich Klenitz Geschäftsführer / General Manager</p>
--

