



D7 line Installation manual

Table of contents

- General description;
- Model code;
- Electric safety;
- Installation kit;
- Installation;
- Electrical connections.

ASCOT spa
ISO 9001
certified

ASCOT spa
Via Falzarego 9/11
20021 Baranzate
(Milano) Italy
Tel. +39 02 333 371
Fax +39 02 350 4243
<http://www.ascot.it>
e-mail support@ascot.it

DIN rail mounting data acquisition, isolation, transmitter




D7 line



Installation manual • M.I.U. D7-3/06.01 • Cod. J30-658-1AD7 FE



General description

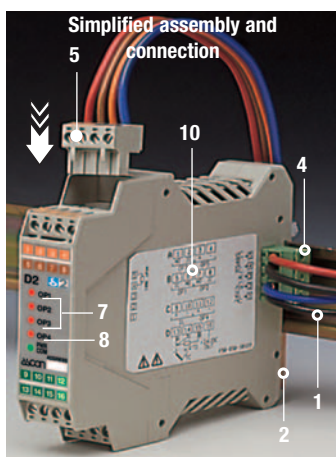

- 1 DIN-rail, EN50022;
- 2 Spring loaded slide for rail fastening;
- 3 Side connector, build-in, to connect one instrument to another (up to 31);
- 4 5-pole male connector, with screw terminals, for power supply and serial communications bus;
- 5 Four quick polarised connectors with 4 screw terminals for I/O;
- 6 Female connector, with termination resistor for serial communications;
- 7 Three Output status leds (red);
- 8 Green Status led:
 - ON: power on
 - flashing: serial communications in progress;
- 9 Couple of connector protections;
- 10 Wiring label;
- 11 Model identification label.

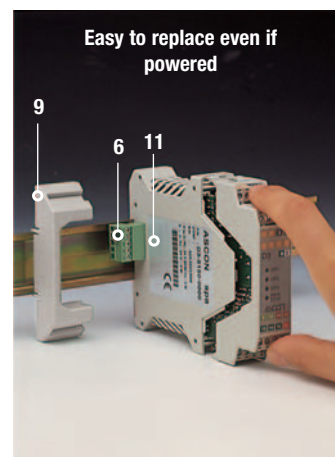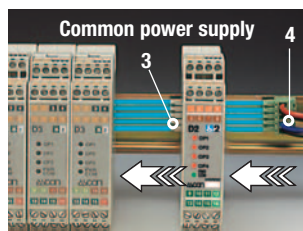

Model code

Mod. **D 7** **5 B C D** - **0 F 0 0**
Line Basic Accessories

The product code indicates the specific hardware configuration of the instrument, that can be modified by specialized engineers only.

Line **D 7**

OP1-OP2 outputs	B
None	0
Relay - Relay	1

Serial communications	C
CanBus	3
RS485 Modbus/Jbus SLAVE	5

Options	D
None	0
Retransmission OP5	5

User manual	F
Italian/English (std)	0
French/English	1
German/English	2
Spanish/English	3



Notes on electric safety and electromagnetic compatibility

Please, read carefully these instructions before proceeding with the installation of the controller

Class II instrument, rear panel mounting.


This instrument has been designed in compliance with:
Regulations on electrical apparatus: according to regulations on the essential protection requirements in electrical apparatus EN 61010-1

Regulations on Electromagnetic Compatibility: according to

- Regulations on RF emissions:
 - EN61000-6-3: 2001 residential environments;
 - EN61000-6-4: 2001 industrial environments.
- Regulation on RF immunity:
 - EN61000-6-2: 2001 industrial equipment and system.

It is important to understand that it's responsibility of the installer to ensure the compliance of the regulations on safety requirements and EMC.

The repair of this instrument has no user serviceable parts and requires special equipment and specialised engineers. Therefore, a repair can be hardly carried on directly by the user. For this purpose, the manufacturer provides technical assistance and the repair service for its Customers. Please, contact your nearest Agent for further information.

All the information and warnings about safety and electromagnetic compatibility are marked with the  sign, at the side of the note.

Installation Kit

Each set of interconnected controllers requires one model **AD3-KIT/BA.RT.PC.CD** kit:

Power supply and serial comm.s connector code AD3/BA



Couple of connector protections code AD3/PC


Connector with termination resistor for serial comm.s code AD3/RT



CD Rom with configuration software tool code AD3/CD

Installation

Dimensions

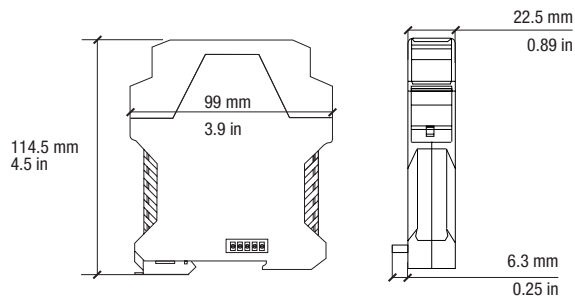


Environmental condition		CE	Suggestion
Operating conditions	Temperature 0...50 °C		
	%Rh Relative humidity 5...95% Rh non-condensing		
Special conditions	Temperature > 50 °C		Use forced ventilation
	%Rh > 95% RH		Warm up
	Conducting atmosphere		Use filter
Forbidden condition	Corrosive atmosphere	Explosive atmosphere	

UL note: Operating surrounding temperature: 50°

Mounting on DIN rail (EN60022)

Mounting


- 1 Clip the upper part of the instrument on the rail;
- 2 Rotate the instrument downwards until the click.

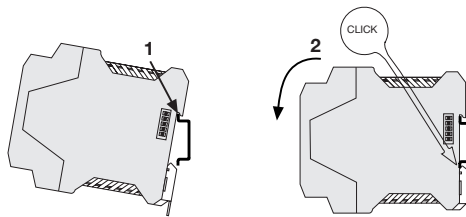

Disassembly


Switch the instrument off

- 1 Lower the spring slide by inserting a flat-blade screwdriver as indicated;
- 2 Turn and lift the instrument upwards.

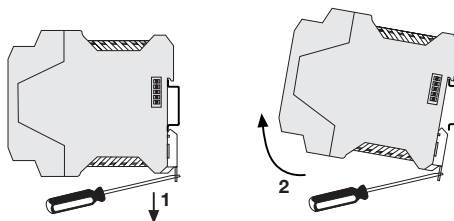


Mounting several instruments (up to 31) side by side

- 1 After the mounting of instruments on the rail, put them side by side so that the male side connector fits into the corresponding female connector;
- 2 After mounting all the instruments side by side insert the female 5-pole connector with the termination resistor of the serial communications into the corresponding male connector;
- 3 Wire the 5-pole male power supply and serial communications connector and insert it in the corresponding female connector;
- 4 When assembled insert the connector protection on both sides.

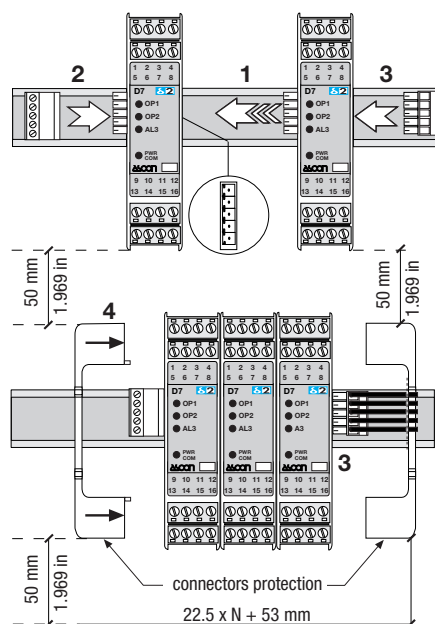

Termination

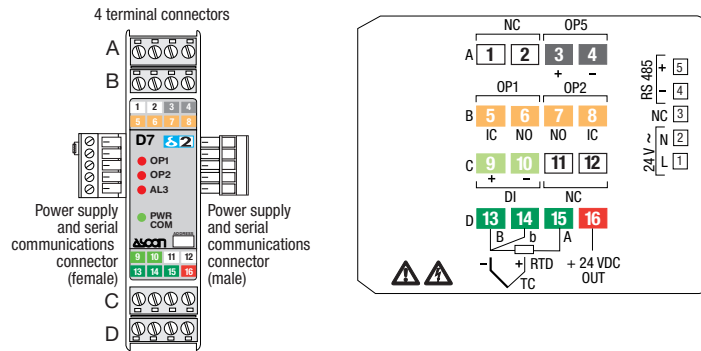


Features	Terminal connector A-B-C-D	Power supply and comm.s connector
Flexible cable section:	0.2...2.5 mm ² (AWG24...AWG12)	0.08...1.5 mm ² (AWG28...AWG16)
Stripped wire	7 mm - 0.28 in	7 mm - 0.28 in
Negative screwdriver	0.6 x 3.5 mm	0.4 x 2.5 mm
Tightening torque	0.5 - 0.6 Nm	0.22 - 0.25 Nm

UL note: Use 60°C copper (Cu) conductor only.

Input


PV control input: L-J-K-S-R-T-B-N-E-W thermocouple type

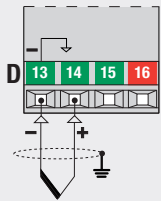

- Connect the wires with the polarity as shown;
- Use always compensation cable of the correct type for the thermocouple used;
- The shield, if present, must be connected to a proper earth.

Linea 150Ω max.

PV control input: For Pt100 resistance thermometer - ΔT (2 x Pt100) special

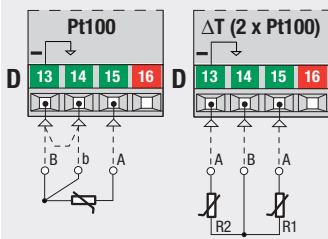


- If a 3 wires system is used, use always cables of the same diameter (1mm² min.) (maximum line resistance 20 Ω/line);
- When using a 2 wires system, use always cables of the same diameter (1,5mm² min.) and put a jumper between terminals 13 and 14.


⚠ When the distance between the controller and the sensor is 15 m. using a cable of 1.5 mm² diameter, produces an error on the measure of 1°C (1.8°F).

R1+R2<320Ω

PV control input: for mA, mV

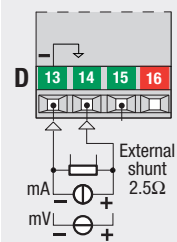


PV control input with 2 wires transmitter

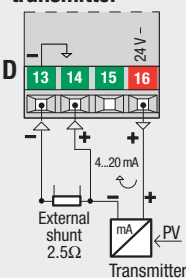

Auxiliary power supply for external transmitter

- 24Vac ±20%;
- 30mA max.;
- without short circuit protection.


PV control input with 3 wires transmitter

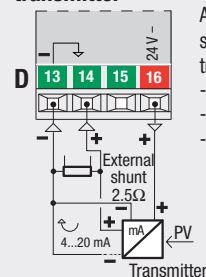

Auxiliary power supply for external transmitter:

- 24Vdc ±20%;
- 30mA max.;
- without short circuit protection.

Digital input

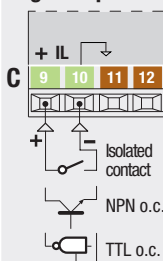

- ON**
The input is active when the logic state is ON, corresponding to the contact closed
- OFF**
The input is inactive when the logic state is OFF, corresponding to the contact open

Precautions



All the wiring must comply with the local regulations.

The supply wiring should be separated from the power cables

Avoid to use electromagnetic contactors, power relays and high power motors nearby.

Avoid power units nearby, especially if controlled in phase angle .

Keep the input low voltage sensor wires away from the power lines and the output cables.

If this is not achievable, use shielded cables on the sensor input, with the shield connected to earth.

Notes



1 Make sure that the power supply voltage is the same indicated on the instrument.

2 Switch on the power supply only after that all the electrical connections have been completed.

3 In accordance with the safety regulations, the power supply switch shall bring the identification of the relevant instrument. The power supply switch shall be easily accessible from the operator.

4 The instrument is PTC protected. In case of failure it is suggested to return the instrument to the manufacturer for repair.


5 To protect the instrument internal circuits use:
- 2 AT fuses for relay outputs with 250 Vac load
- 4 AT fuses for relay outputs with 120 Vac load
- 1 A~T for SSR outputs.

6 Relay contacts are already protected with varistors.


Only in case of 24 Vac inductive loads, use model A51-065-30D7 varistors (on request).

Outputs OP1 - OP2 - OP5 (option)


Alarm output

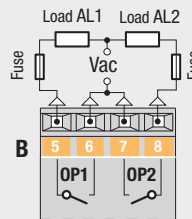

Retransmission

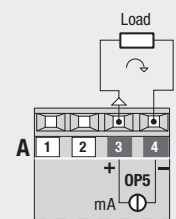

Power supply bus and serial communication RS485

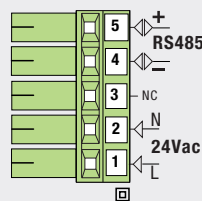

Power supply: Switching type with double insulation with incorporated PTC (fuse which can be reset).

Rated voltage: 24 Vac(-25% +12%) 50/60 Hz;
24 Vdc (-15% +25%).

Power consumption: 3 W max.

Protection: PTC protected.

Serial communication: Passive and galvanically isolated interface 500 Vac/1 min. Conforms to standard EIA RS 485, Modbus/Jbus protocol

OP1-OP2-OP5 output characteristics (option)

Output	Type	For resistive load or auxiliary circuit breaker
OP1 - OP2	Relay	SPST Relay N.O.: 2A/250Vac 4A/120Vac External fuse 2A~T External fuse 4A~T
OP5	Analogue	For PV retransmission isolation 500Vac/1 min: 0/4...20 mA - 750 Ω / 15V max.