

**TEMPERATURE  
CONTROLLER PROGRAMMER**  
**1/16 DIN - 48 x 48**  
**KM3 model**  
Quick Guide • ISTR-FKM3ENG03



## DECLARATION OF CONFORMITY AND MANUAL RETRIEVAL

KM3 is a panel mounting, Class II instrument. It has been designed with compliance to the European Directives. All information about the controller use can be found in the Engineering Manual: ISTR-MKM\_x-ENGoX ("x" is the revision). The Declaration of Conformity and the manual of the controller can be downloaded (free of charge) from the web-site: [www.ascontecnologic.com](http://www.ascontecnologic.com)

Once connected to the web-site, search:

**KM3**

then click on **KM3**.

In the lower part of the product page (in any language) is present the download area with links to the documents available for the controller (in the available languages).

### ⚠ Warning!

- Whenever a failure or a malfunction of the device may cause dangerous situations for persons, things or animals, please remember that the plant must be equipped with additional devices which will guarantee safety.
- We warrant that the products will be free from defects in material and workmanship for 18 months from the date of delivery. Products and components that are subject to wear due to conditions of use, service life and misuse are not covered by this warranty.

### ⚠ Warning!

All the order codes not present in the tables that follow (Digit **A**: Code **P**, Digit **E**: Code **M**, Digit **F**: Code **M**) are fully described in the "Engineering Manual" that can be freely downloaded from Ascon Tecnologic web site.

## MODEL CODE

The Hardware resources are identified by the following Model Code.

Model: KM 3 A B C D E F G H I - 0 0 0 0

Line	KM	3
Optional functions	A	
None		-
Timer	T	
Power Supply	B	
100... 240Vac (-15... +10%)	H	
24Vac (-25... +12%) or 24Vdc (-15... +25%)	L	
Input	C	
TC, PT100, PT1000, mA, mV, V + Digital Input 1	C	
TC, NTC, PTC, mA, mV, V + Digital Input 1	E	
Output OP1	D	
Relay (1 SPST NO, 4 A/250 Vac)	R	
VDC for SSR (12 Vdc/20 mA)	O	
Analogue Output (0/4... 20 mA, 0/2... 10 V)	I	
Output OP2	E	
None		-
Relay (1 SPST NO, 2 A/250 Vac)	R	
VDC for SSR VDC (12 Vdc/20 mA)	O	

Output OP3	F
None	-
Relay (1 SPST NO, 2 A/250 Vac)	R
VDC for SSR (12 Vdc/20 mA)	O
Output OP4	G
Digital I/O (see the Electrical Connections paragraph for details)	D
Serial Communications	H
TTL	-
RS485 Modbus	S
Terminal Type	I
Standard (screw type non removable terminal blocks)	-
With plug-in screw type terminal blocks	E
With plug-in clamp type terminal blocks	M
With plug-in terminal blocks (fixed part only)	N

Model Code example: **KM3-HCRRRD--**

Controller KM3, no timer, 100... 240 Vac, TC/PT100/PT1000/mV/V + Digital Input 1, 3 Relay Outputs, Output 4, TTL, non removable screw type terminals.

## CONFIGURATION CODE

The KM3 can be easily configured by the "Code Configuration" method for the most common requirements, just entering two 4-digit codes: **Cod 1** [LMNO] for the Input Type and Control Mode selection and **Cod 2** [PQRS] for the Alarms and the Service Functions. For complete controller configuration see the Engineering Manual.

Note: Before starting the configuration code setting, please define and write down **Cod 1** and **Cod 2** as needed:

User **Cod 1** [LMNO]

**Cod 1**

Input Type and Range		L	M
TC J	-50... +1000°C	0	0
TC K	-50... +1370°C	0	1
TC S	-50... 1760°C	0	2
TC R	-50... +1760°C	0	3
TCT	-70... +400°C	0	4
Infrared J	-50... +785°C	0	5
Infrared K	-50... +785°C	0	6
PT 100/PTC KTY81-121	-200... +850°C/-55... +150°C	0	7
PT 1000/NTC 103-AT2	-200... +850°C/-50... +110°C	0	8
Linear 0... 60 mV		0	9
Linear 12... 60 mV		1	0
Linear 0... 20 mA (this selection forces Out 4 = TX)		1	1
Linear 4... 20 mA (this selection forces Out 4 = TX)		1	2
Linear 0... 5 V		1	3
Linear 1... 5 V		1	4
Linear 0... 10 V		1	5
Linear 2... 10 V		1	6
TC J	-58... +1832°F	1	7
TC K	-58... +2498°F	1	8
TC S	-58... 3200°F	1	9
TC R	-58... +3200°F	2	0
TCT	-94... +752°F	2	1
Infrared J	-58... +1445°F	2	2
Infrared K	-58... +1445°F	2	3
PT 100/PTC KTY81-121	-328... +1562°F/-67... +302°F	2	4
PT 1000/NTC 103-AT2	-328... +1562°F/-58... +230°F	2	5

User **Cod 2** [PQRS]

**Cod 2**


Alarm 3			Q
Alarm 2	Alarm 1	P	
Not used	0	0	0
Sensor break	1	1	1
Absolute	High	2	2
	Low	3	3
Absolute High/Low	External High/Low	4	4
	Internal High/Low	5	5
Deviation	Deviation high	6	6
	Deviation low	7	7
Band	External band	8	8
	Internal band	9	9

Press **■** to store the Configuration code

Note: To leave the Configuration session without saving the settings made, press the **■** button

## DISPLAY AND KEYS

### DISPLAY AND KEYS

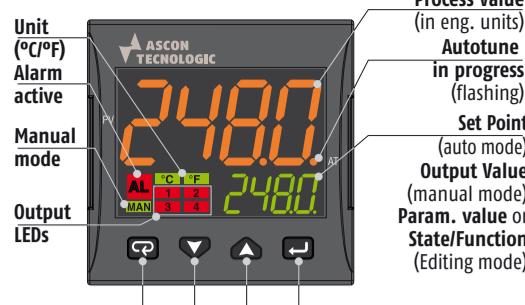


Operator Mode		Editing Mode
Access to:	- Operator Commands (Timer, Setpoint selection ...)	Confirm and go to Next parameter
Access to:	- Operator additional information (Output value, running time ...)	Increase the displayed value or select the next element of the parameters list
Access to:	- Set Point	Decrease the displayed value or select the previous element
Programmable key:	Start the programmed function (Autotune, Auto/Man, Timer ...)	Exit from Operator commands/Parameter setting/Configuration


## DIMENSIONS

Overall dimensions (L x H x D): 48 x 48 x 63 mm  
(1.89 x 1.89 x 2.48 in.)  
Panel Cut-out (L x H): 45+0.6 x 45+0.6 mm  
(1.78+0.023 x 1.78+0.023 in.)

## MOUNTING

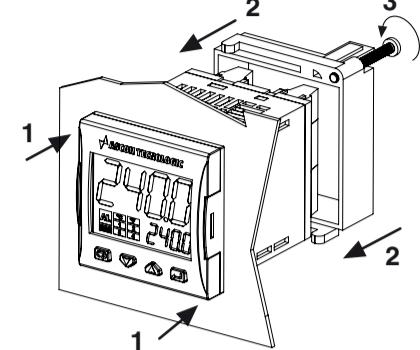


## TERMINALS

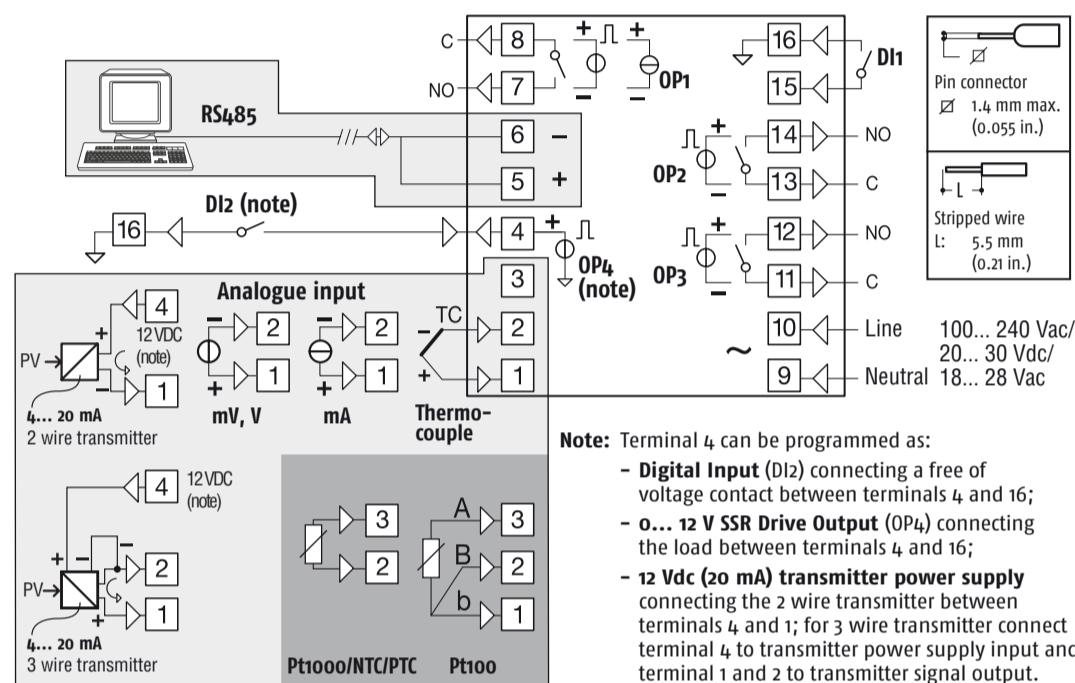

Note: Terminal 4 can be programmed as:

- **Digital Input (DI2)** connecting a free of voltage contact between terminals 4 and 16;
- **0... 12 V SSR Drive Output (OP4)** connecting the load between terminals 4 and 16;
- **12 Vdc (20 mA) transmitter power supply** connecting the 2 wire transmitter between terminals 4 and 1; for 3 wire transmitter connect terminal 4 to transmitter power supply input and terminal 1 and 2 to transmitter signal output.


## ALARM TYPES (**Cod 2** digits: P, Q, R)

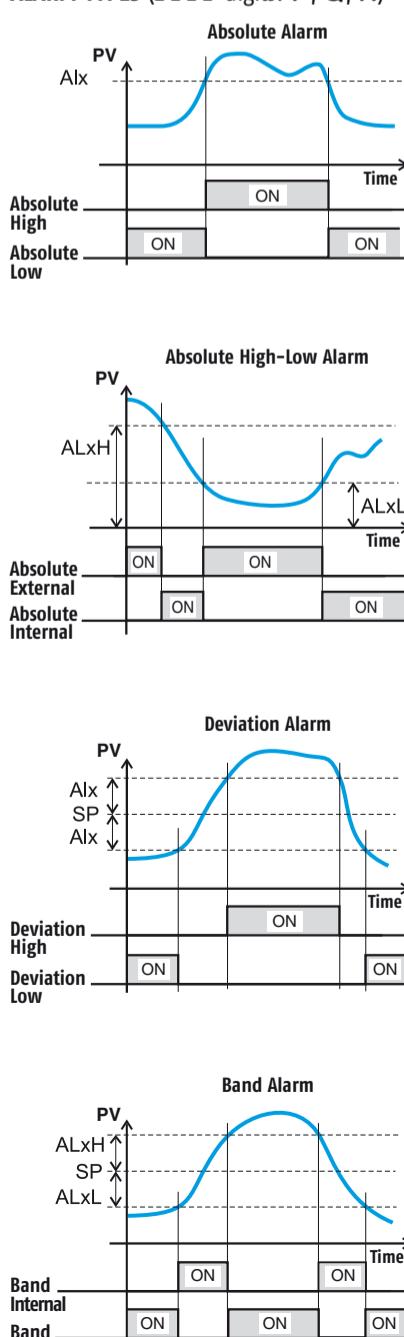



Note: As default, when the alarms are active, only Al1 threshold is available at "Operator Command" level to perform non critical tasks. To protect the Al2 and Al3 thresholds against undesired changes, they are available only at "Parameters list" level (password: 20). For different configurations, see the Engineering Manual.

- Notes: 1. **Wattmeter Instantaneous power** is continuously computed as multiplication of the Load Voltage, Load Current parameter values and the controller output instantaneous value.  
2. **Wattmeter power consumption** is the estimated hourly energy consumption (using Load Voltage and Load Current parameter values), computed on the previous 15 minutes period. The readout is updated every 15 minutes.  
3. **Worked Time counter** is continuously increased when the controller is turned ON.

## PARAMETERS SETTING

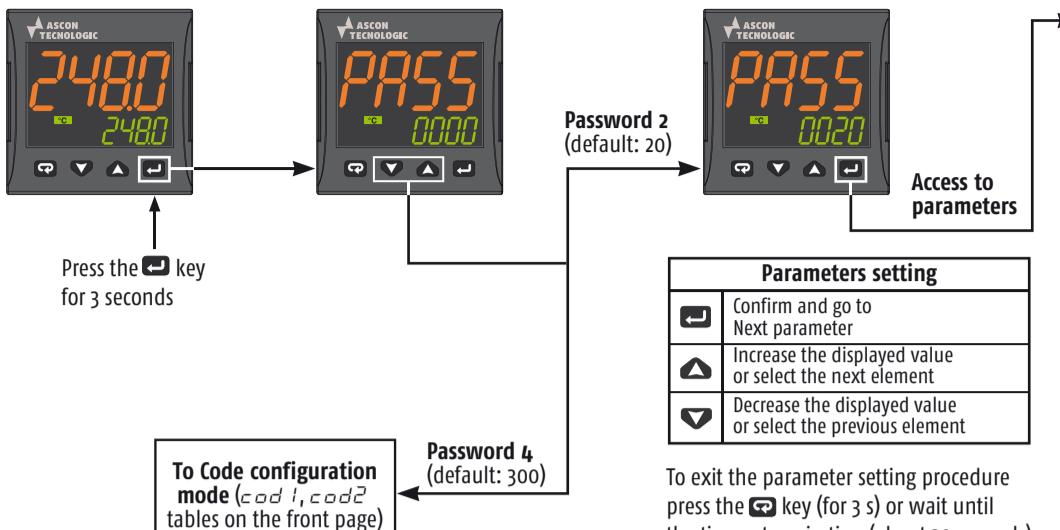

## CONTROLLER OPERATION

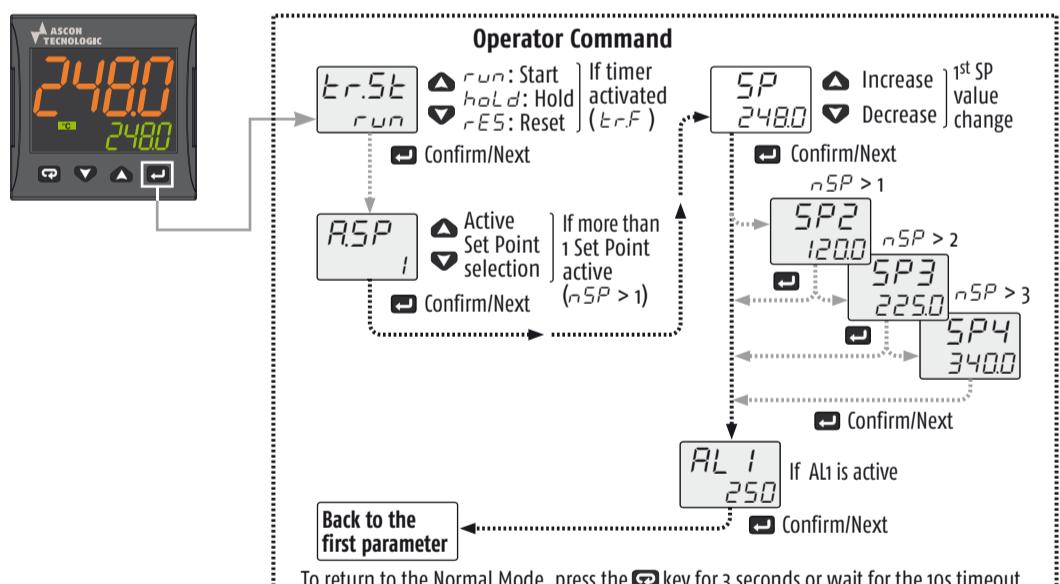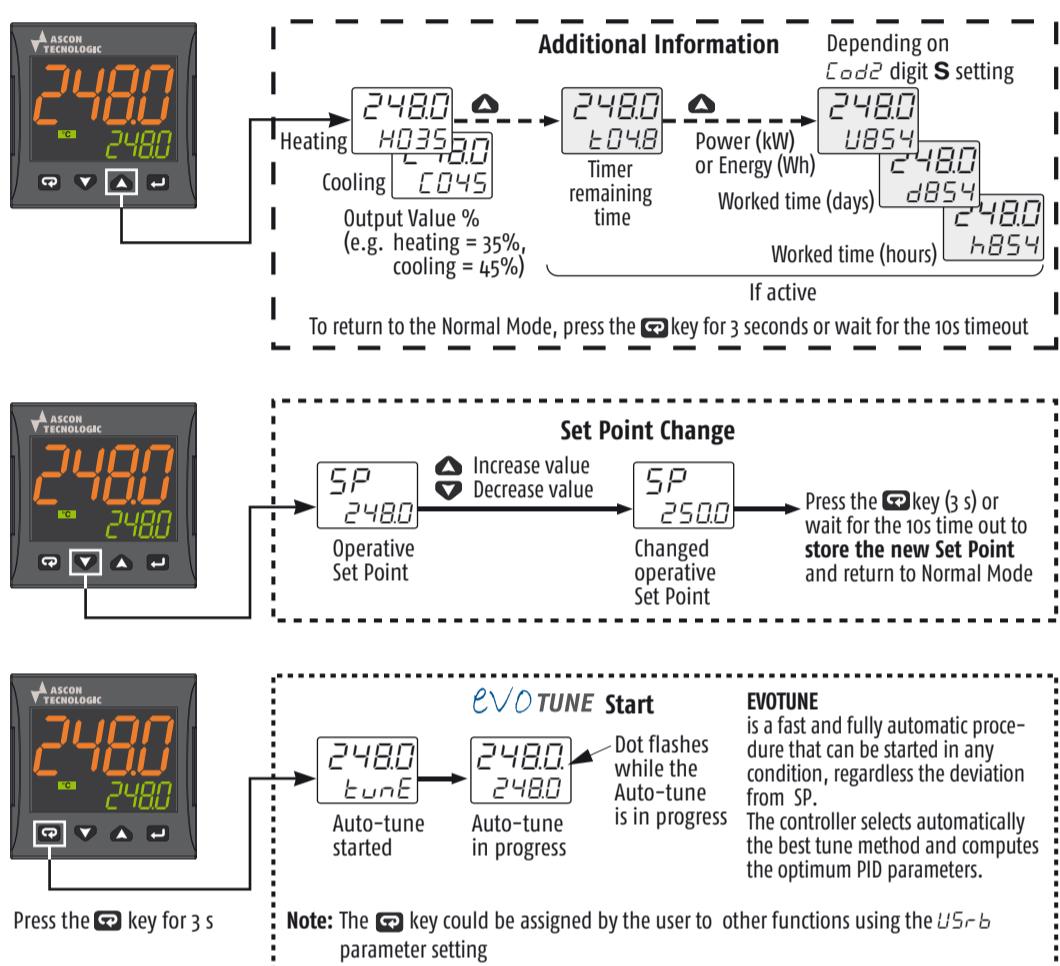

Parameters List (PASS: 20) (in gray the parameters related to optional features)

Group	Param.	Description	Range value or selection list elements	Default	User value	Note
Commands	Er.Sr	Timer status				Option
	oPER	Operative Mode Selection	reg = Auto, oplc = Manual, stdy = Standby			
	RSP	Set Point Selection	0 = SP, 1 = SP2, 2 = SP3, 3 = SP4	0 = SP		
	EunE	Start Auto Tune	0 = OFF, 1 = start	0 = OFF		evoTUNE
Control	Pb	Proportional Band	1... 9999 (Engineering Units = E.U.)	20		
	Ei	Integral Time	0... 10000 s	200		Cod / Digit N = 1
	Ed	Derivative Time	0... 1000 s	50		
	HSEt	Hysteresis ON/OFF Control	0... 9999 (E.U.)	1		Cod / Digit N = 0
	tch	Heating output cycle time	0.1... 130 s	20.0		Cod / Digit N = 1
	rco	Relative Cooling Gain	0.01... 99.99	1.00		Cod / Digit N = 1 Cod / Digit O > 4
	tcc	Cooling output cycle time	0.1... 130 s	20.0		Cod / Digit N = 1 Cod / Digit O > 1
Set Point	SP	Set Point 1				
	SP2	Set Point 2	-1999... +9999 (E.U.)			If nSP > 1
	SP3	Set Point 3				If nSP > 2
	SP4	Set Point 4				If nSP > 3
Alarms	SPLL	Set Point min. Value	-1999... SPHL (E.U.)			
	SPHL	Set Point max. Value	SPHL... 9999 (E.U.)			
	nSP	No. of Set Points	1... 4	1		
	RL1	Alarm 1 threshold	AL1L... AL1H			
Soft Start	RL1L	Alarm 1 low threshold/Low limit	-1999... +9999 (E.U.)	-1999		If digit P of Cod2 is > 1
	RL1H	Alarm 1 high threshold/High limit		9999		
	HRL1	AL1 hysteresis	1... 9999 (E.U.)	1		
	RL2	Alarm 2 threshold	AL2L... AL2H			
Input	RL2L	Alarm 2 low threshold/Low limit	-1999... +9999 (E.U.)	-1999		If digit Q of Cod2 is > 1
	RL2H	Alarm 2 high threshold/High limit		9999		
	HRL2	AL2 hysteresis	1... 9999 (E.U.)	1		
	RL3	Alarm 3 threshold	AL3L... AL3H			
Timer	RL3L	Alarm 3 low threshold/Low limit	-1999... +9999 (E.U.)	-1999		If digit R of Cod2 is > 1
	RL3H	Alarm 3 high threshold/High limit		9999		
	HRL3	AL3 hysteresis	1... 9999 (E.U.)	1		
	Er.F	Timer Type	nonE = Timer not used i.d.A = Delayed ON at start command i.uP.d = Activation ON at Power ON i.d.d = At start command i.P.L = Asymmetrical oscillator, start in OFF i.L.P = Asymmetrical oscillator, start in ON	none		Timer management (Start, Stop, Reset) can be done using the Er.Sr command or the  key (if programmed) or by the DI1/DI2 digital inputs (if programmed).
Digital Inputs	Er.u	Timer Units	0 = hh.mm 1 = mm.ss 2 = sss.d	1 = mm.ss		
	Er.t1	Time 1	00.01... 995.9	1.00		
Display	Er.t2	Time 2	00.00... 995.9	1.00		

If the ordered controller is equipped with the Programmer option, see the "ISTR-FKM3P" Addendum

I/O	104F	I/O 4 Function	ON = Transmitter Power Supply OUT4 = SSR out Di2C = Dig. In. from contact Di2U = 24 VDC Digital Input	ON		
Digital Inputs	d1F.1	Digital Input 1 Function	0... 21	0		See the DI1, DI2 functions table
	d1F.2	Digital Input 2 Function	0... 21	0		
	uSrb	Key  Function	nonE, tunE, oplc, aac, asi, chsp, st.bv, str.t, tunE			See the  Key function table
Display	d1cL	Colour of the Process Value display	0 = Change 1 = Red 2 = Green 3 = Orange	2		If Change, the colour is green if PV differs from SP less than RdE, red if higher than RdE and orange if is lower than RdE
	RdE	Display change color threshold (when d1cL = 0)	0 (OFF)... 9999 (e.u.)			
	d1sL	Display Power OFF time (mm.ss)	0FF (display ON) 0.1... 99.59	0FF		
Serial communications	Addr	Instrument Address	1... 254	1		
	bRud	Baud rate	1200, 2400, 9600 baud, 19.2, 38.4 kbaud	9600		Modbus RTU slave protocol
Wattmeter	Uolt	Load Voltage	1... 999 (V)	230		
	cur	Load Current	1... 9999 (A)			If digit S of Cod2 is > 1
Password	PAS4	Configuration access Password	0... 999	300		
	PAS2	Parameters access Password	0... 999	20		


Note: To access all the instrument features, please see the "Complete configuration procedure" in the "Engineering Manual".

Complete Configuration and Parameter setting can be easily uploaded from the controller and downloaded to other controllers using the Configuration Key and Communication Adapter model: A-01.


## FUNCTION SELECTION

Timer Types (selected by Er.F) (option)


i.R Delayed ON at Start command

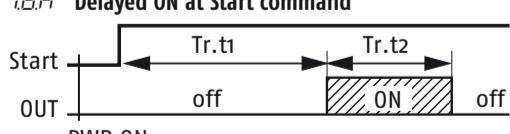


i.Pd Delayed ON at Power ON

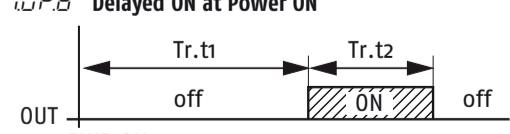


i.d At Start command

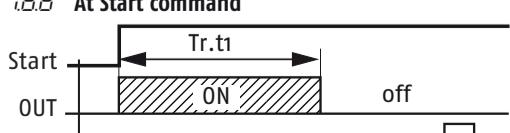

i.P.L Asymmetrical oscillator with start in OFF

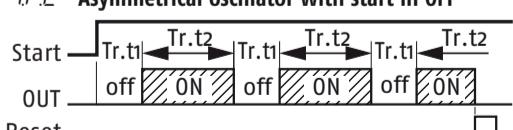

i.L.P Asymmetrical oscillator with start in ON

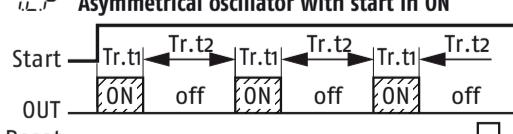

## d1F - Digital Inputs DI1 and DI2 Functions

Code displayed	Description
0	Disabled (OFF) (default)
1	Alarm Reset
2	Alarm Acknowledge (ACK)
3	Hold of the measured value
4	Stand by mode
5	Manual Mode
6	Heat with "SP" and Cool with "SP2"
7	Timer Run/Hold/Reset [on transition]
8	Timer Run [on transition]
9	Timer Reset [on transition]
10	Timer Run/Hold
11	Timer Run/Reset
12	Timer Run/Reset with lock at the end of the time count
18	Sequential Set Point selection [on transition]
19	SP/SP2 selection
20	Binary coding for Set Point selection on DI1 and DI2 (00 = SP, 01 = SP2, 10 = SP3, 11 = SP4)
21	Digital inputs in parallel to the  and  keys (DI1 = , DI2 = )

## uSrb Key Function

Code displayed	Description
nonE	Not used
tunE	Starts auto tuning functions (default)
oplc	Manual mode
RRc	Alarm Reset
RS1	Alarm Acknowledge
chSP	Circular Set Point Selection (shows SP, SP2, SP3)
Stby	Stand-by mode
Stsr	Starts/Stop/Reset timer